


Frame Fixing

Typical Applications:

- Quick, easy fixing of timber or metal door and window frames.
- No marking out - drill straight through frame.

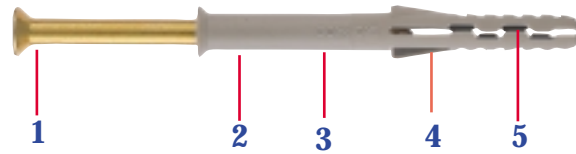


1. Pozi-head screw provided, suitable for use with screw caps.
2. Durable PA6 grade nylon for extended fixing life.
3. Tough nylon sleeve prevents frame distortion during tightening.
4. Anti-rotation lugs.
5. Extended zig-zag design for enhanced expansion.

- Fixing timber or metal window and door frames to solid brickwork and masonry.


Product Specification

DESC.	HOLE DIA. (mm)	MAX. THICKNESS (mm)	FIXINGS PER PACK			BOX PRODUCT CODE
			RETAIL	TRADE	BOX	
8 x 60mm	8	20	-	16	50	21-320
8 x 80mm	8	40	4	16	50	21-323
8 x 100mm	8	60	-	16	50	21-326
8 x 120mm	8	80	-	16	50	21-329
10 x 80mm	10	30	-	12	50	21-335
10 x 100mm	10	50	4	12	50	21-338
10 x 120mm	10	70	4	12	50	21-340
10 x 135mm	10	85	4	12	50	21-344
10 x 160mm	10	110	-	12	50	21-347
8 x 80mm + Drill Pack	8	40	4	-	-	-
10 x 100mm + Drill Pack	10	50	6	-	-	-
10 x 120mm + Drill Pack	10	70	4	-	-	-


Installation

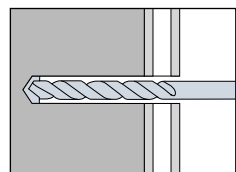

1. Place frame in position and drill appropriate diameter hole through frame and into base material. The hole depth (including frame) should equal plug length plus 10mm. Clean out hole. Countersink for neat finish.

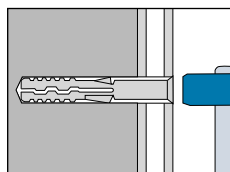

2. Insert plug through fixture into hole and lightly tap until flush with the surface.

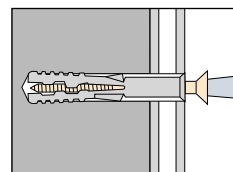

3. Insert the screw and tighten until secure. Fit a screw cap when fixing is complete (optional).

PVCu Frame Fixing

Typical Applications:

- Direct mounting of PVCu window frames to solid brickwork and masonry.




1. Locking tabs clip into the PVCu frame.
2. Durable PA6 nylon sleeve for extended fixing life.
3. Design prevents frame distortion when tightening.

- Rapid installation of new PVCu double glazing units.
- Secure fixings for PVCu and aluminium replacement frames.
- Fixing clips into reinforced and unreinforced PVCu frames for extra support.


Product Specification

DESC.	HOLE DIA. (mm)	MAX. THICKNESS (mm)	FIXINGS PER PACK		BOX PRODUCT CODE
			TRADE	BOX	
8 x 100mm	8	35	-	100	21-650
8 x 120mm	8	55	-	100	21-651
8 x 140mm	8	75	-	100	21-652
10 x 75mm	10	10	-	100	21-654
10 x 100mm	10	35	-	100	21-656
10 x 120mm	10	55	16	100	21-658
10 x 140mm	10	75	16	100	21-660
10 x 165mm	10	100	-	100	21-662


Installation

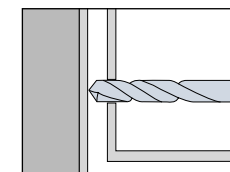

1. Place frame in position and drill through section at manufacturer's recommended centres. NB. Use suitable size of HSS drill bit.

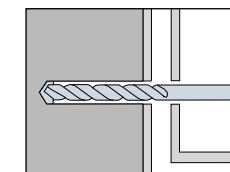

2. Drill through frame holes into base material to required depth, using appropriate size of masonry drill. Total hole depth (incl. frame) should equal fixing length plus 10mm.

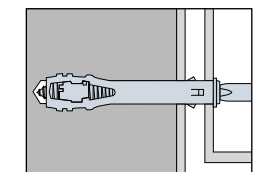

3. Clean hole and install fixing through frame into masonry. Tighten screw until secure. Fixing may be released and re-secured, if necessary, to align frame accurately. Fit a screw cap when fixing is complete (optional).